



120 CAMERA

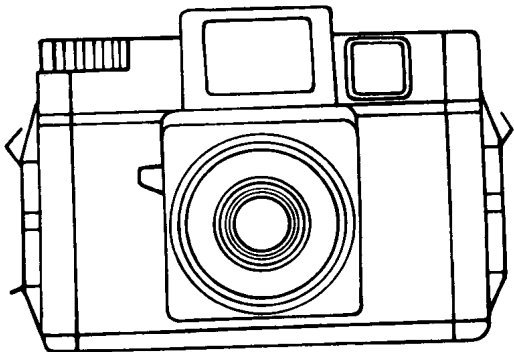

Instruction Manual

1. Taking Lens
2. Focusing Ring
3. Shutter Release Button
4. Winding Knob
5. Accessory Shoe
6. View Finder
7. Aperture Changing Knob
8. View Finder Eyepiece
9. Picture Number Indicator
10. Catch

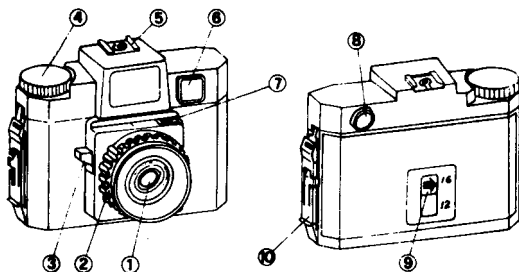


FILM LOADING




1. Press the catches downwards.


2. Remove the back.

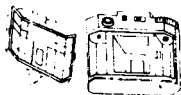


3. Break the seal of a rollfilm; hold the backing paper, engage the spool with the fixed pin and let it slip into its chamber.

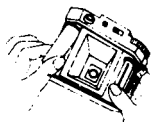


4. The tapered end of the backing paper must point towards the empty spool. Pull out about 4 in. (10cm.) of the paper, keeping the full spool in its chamber with the thumb. Insert the end of the paper in the longer slot of the empty spool and give the film wind knob two or three turns in the direction of the arrow. Carefully align the paper with the camera edges.

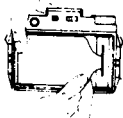


5. Replace the back and slide the catches upwards.

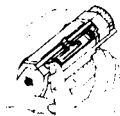

6. Turn the Winding Knob in the direction of the arrow until the number "1" appears in the red window. Now the camera is ready for taking pictures.

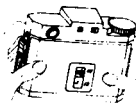

HOW TO TAKE PICTURE

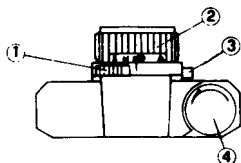

1. Set the aperture according to the weather: Sunny or Cloudy.
2. Estimate the distance from the object to the camera and set the distance scale accordingly.
3. Now look through the view finder and compose the picture; press the shutter release button slowly downwards. A picture is taken.
4. Turn the winding knob until the next number (of the film) is seen in the red window. The above process will apply until all 16 pictures have been taken.


DON'T FORGET TO TAKE OFF THE LENS CAP!

FILM UNLOADING

Turn the winding Knob until the film is completely wound into the take-up spool.

Open the camera and take out the exposed film for developing.

FLASH PHOTOGRAPHY

The accessory shoe at the top of the camera is fit for all hot shoe type flash unit. After mounting the flash unit, flip the aperture changing knob to  position. The aperture of the camera is f/8, please find out the effective flash distance according to the Guide No. of the flash (refer to the Exposure Guide of flash unit).

SOME SIMPLE SUGGESTIONS

- Remember to take off lens cap before taking picture.
- The sun must always be behind you.
- Hold camera steadily and firmly against your face.
- Press down the Shutter Release Button gently.
- Remember to wind your film to the next number after snapping each picture.
- Loading or unloading of film must always be done in a dark place.
- **DO NOT** snap pictures in the shade or where there is insufficient light unless flash unit used.
- **Never** take pictures at a distance of less than 5 ft.
- Do not take pictures of fast moving objects.
- Always clean the lens with a soft and smooth cloth.

SPECIFICATION

Lens : Optical lens, f/8 60mm
Shutter : Leaf Shutter, Speed 1/100 sec
Film : Suitable for 120 colour or Black/White film ASA 100/DIN 21
Frame : 6cm x 4.5cm
View Finder : Eye level, direct view finder
Focusing : Adjustable
Dimension : 140 x 102 x 76 mm
Weight : 200 grams
Accessory : One strap